


Step 1 – Double Check Measurements & Check for Obstacles:

- Unpack your blind and fittings.
- Hold the blind up to the position on the outside of the window you wish to install it to ensure it to ensure all measurements are correct & the blind fits in the desired position.
- Check for any potential obstructions such as handles – to try and avoid these when installing.



Step 2 – Mounting Clips & 'L' Shape Bracket:

- Screw the mounting clip to the L shaped bracket with the provided screws, ensuring the shorter edge of the clip is facing the front.
- Screw the L shaped bracket to the outer side of the architrave, ensuring the brackets on either end are at least 50mm from the edge of the window frame.
- Place the brackets evenly along the window frame

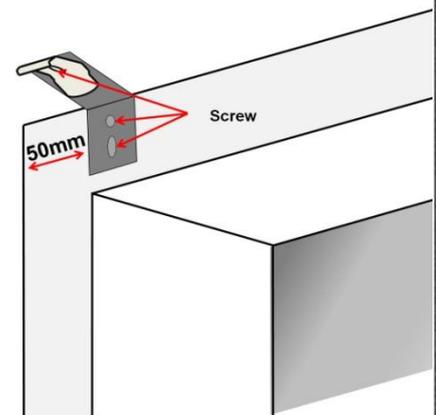


Step 3 – Inserting the track:

- Ensure you position the pull cord on the left or right as desired.
- Snap the track into place by placing the front edge into the mounting clips
- Raise the back of the track and push it up into the clip until you hear a "click"
- Place pressure in an upwards motion near each clip, to ensure the track has secured into each clip correctly.

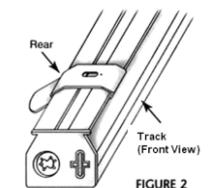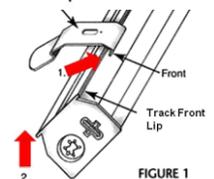

Step 4 – Fitting the vertical blinds


- Using the control chain, rotate the blind hooks so that they are 90° to the track.
- One by one, clip the vertical blinds into the hooks.
- Cut off the excess chain.

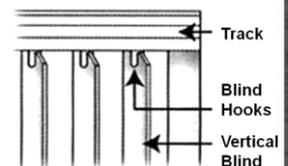

Note: You may be supplied a few extra blind panels, which you can store for later use in case you need to replace a panel.

Step 5 – Fit Child Safety Device

- Place the clip over the chain, so that the chain can slide through.
- Position the clip on the wall, so that there is enough free play to easily use the chain, but not tight so that it tensions the chain.
- Screw the clip firmly into place.
- Repeat for the control rope.

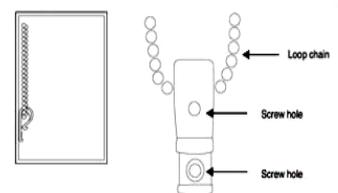

Please turn over to read warning →

WARNING:

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that loose cord or ball chain cannot form a loop 220mm or longer as measured along the perimeter of the cord. It should be secured at a height of more than 1600mm above floor level to ensure child safety.

A cord or ball chain guide may be installed lower than 1600mm above floor level, if the cord or ball chain is sufficiently secured or tensioned to prevent a loop of 220mm or longer being formed. If the cord or ball chain guide is installed lower than 1600mm above floor level, it must be installed so as to:

- A. prevent a child from being able to remove the cord or ball chain and;
- B. prevent a loop of 220mm or longer from being formed.